

Targetlite 2448 Assembly Instructions

Note: Before using your Targetlite Target Stand, Please follow all safety precautions when handling and discharging firearms. The Targetlite Target Stand is NOT a bullet trap or bullet stop! Be sure you have an adequate backstop behind the target stand and be aware of what is directly behind the target stand and your backstop. Never shoot in the direction of people, houses, telephone poles, or across a road.

Required Items:

- A) Targetlite Target Stand
- B) The Targetlite Cardboard Box, or any other suitable 24" wide piece of cardboard for backing.
- C) 1" x 2" x 8' wood furring strips, available at your local hardware store or lumber yard. Precut the furring strips to your desired height. Approximately 3'-4' is suitable for prone or bench rifle shooting and approx. 5' is suitable for handgun or bow shooting. Furring strips may be damaged or destroyed during shooting, so you may wish to prepare an extra set or two.
- D) A staple gun with minimum 1/2" staples or large tacks. These will be used to attach the cardboard to the furring strips and the target to the cardboard.
- E) Targets

 
 
Assembly Instructions:

1) Remove each leg (A) from cross bar (B) by unscrewing and removing the wingnuts. Retain the wingnut for use later.



2) Lay the legs (A) on the ground with the bolts facing up.

3) Position the cross bar (B) over the legs so that the mounting bolts pass up through the leg slots and through the holes in the top of the cross bar.

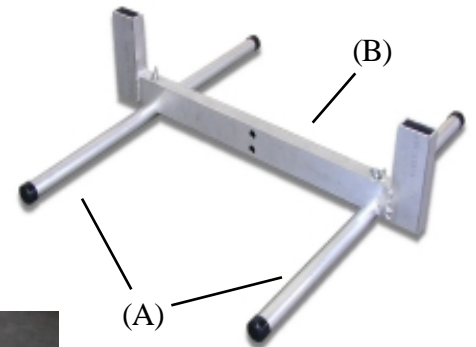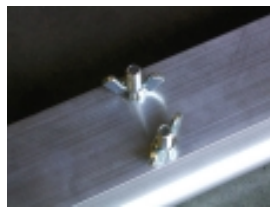

4) Reattach the wingnut to the bolt and tighten. **HAND TIGHTEN ONLY!**

 
 
5) Slide the 1"x2" furring strips into the vertical tubes.

6) Staple the cardboard backing to the furring strips at the desired height. To use the box supplied with the Targetlite Target Stand, cut the "wings" off of the ends of the box. Then cut down the one of the folded edges of the box from one end to the other and lay flat.



7) Now, staple your target to the cardboard. Be careful, staples that penetrate through the cardboard are sharp.

8) Enjoy a great day of shooting!

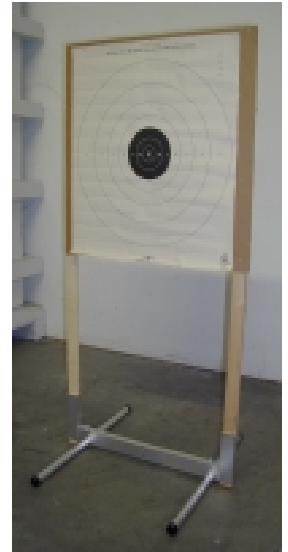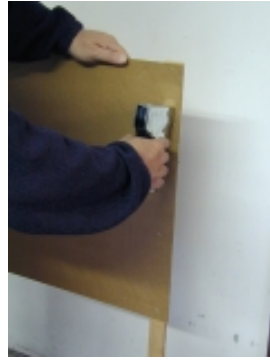

How to carry



Disassembly and Storage Instructions:

1) Reverse the Assembly instruction to return the Targetlite Target Stand to its compact package.



Warranty:

This product is warranted against manufacturing defect for a period of One (1) year from date of purchase. Although this product is designed to be shot at, the base portion of the stand is not designed to be shot, deliberately or accidentally. Therefore, any damaged that is caused by a projectile hitting the target stand is not covered under warranty. However, we have done extensive testing on this product and have found that due to its durable construction, it can withstand several impacts without seriously affecting its' operation.

For warranty questions, contact us at the number listed below.

Ultra Shot Accuracy Products

A trade name of Various Technologies Inc.

2720 Aiello Dr. Bldg. C

San Jose, CA 95111

Phone: (408) 972-4460 Fax: (408) 972-4125